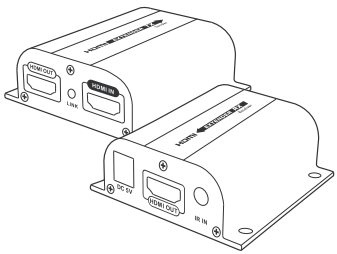 


HDMI Extender OVER NETWORK

User's manual





• Introduction
This HDMI extender over cat6 extends the HDMI content up to 60 meters for 1080p.


• Important safety notice


- Do not mix up HDMI to RJ45 sender and RJ45 to HDMI receiver before installation.
- Do not hot plug when it is working.
- Use DC5V power supply only. Make sure specification matched if using adapters not supplied by factory.


• Package Contents



 HDMI to RJ45 sender TX*1pcs


 RJ45 to HDMI receiver RX*1pcs


 User manual*1pcs


 DC5V1A*2pcs


 IR blaster extension cable *1pcs

 
 

 IR receiver extension cable*1pcs

• Installation Requirements

- HDMI source device(computer graphics card, DVD,PS3, HD monitoring equipment etc).
- HDMI display device like SDTV, HDTV, projector with HDMI port.
- UTP/STP cat6/6A/7 cable, follow standard IEEE-568B.

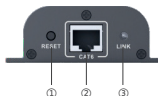
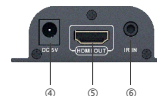
• Panel Description

1. HDMI to RJ45 transmitter

- ① HDMI signal output
- ④ IR signal output to connect with blaster extension cable
- ② HDMI signal indicator led
It lights on all the time with HDMI signal input, flashes with no signal input.
- ⑤ RJ45 signal output
- ③ HDMI signal input
- ⑥ Reset
- ⑦ DC5V power input

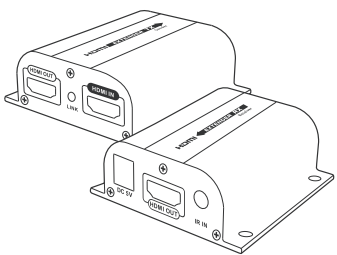
2. RJ45 to HDMI receiver

- ① Reset
- ④ DC5V power input
- ② RJ45 signal input
- ⑤ HDMI signal output
- ③ RJ45 indicator led
It lights on all the time with HDMI signal transmission, flashes with no signal transmission.
- ⑥ IR signal input to connect with IR receiver extension cable

HDMI Extender OVER NETWORK

User's manual





• Introduction
This HDMI extender over cat6 extends the HDMI content up to 60 meters for 1080p.


• Important safety notice


- Do not mix up HDMI to RJ45 sender and RJ45 to HDMI receiver before installation.
- Do not hot plug when it is working.
- Use DC5V power supply only. Make sure specification matched if using adapters not supplied by factory.


• Package Contents



 HDMI to RJ45 sender TX*1pcs


 RJ45 to HDMI receiver RX*1pcs


 User manual*1pcs


 DC5V1A*2pcs


 IR blaster extension cable *1pcs

 
 

 IR receiver extension cable*1pcs

• Installation Requirements

- HDMI source device(computer graphics card, DVD,PS3, HD monitoring equipment etc).
- HDMI display device like SDTV, HDTV, projector with HDMI port.
- UTP/STP cat6/6A/7 cable, follow standard IEEE-568B.

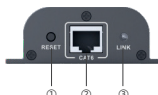

• Panel Description

1. HDMI to RJ45 transmitter

- ① HDMI signal output
- ④ IR signal output to connect with blaster extension cable
- ② HDMI signal indicator led
It lights on all the time with HDMI signal input, flashes with no signal input.
- ⑤ RJ45 signal output
- ③ HDMI signal input
- ⑥ Reset
- ⑦ DC5V power input

2. RJ45 to HDMI receiver

- ① Reset
- ④ DC5V power input
- ② RJ45 signal input
- ⑤ HDMI signal output
- ③ RJ45 indicator led
It lights on all the time with HDMI signal transmission, flashes with no signal transmission.
- ⑥ IR signal input to connect with IR receiver extension cable